

- Pflanzenöltechnik
- weltweiter Teileversand
- Beratung + Umrüstung

 english description at page 2

Wie montiere ich eine Rohrverbindungsmuffe ?



Trennen Sie die alte Bremsleitung mit dem Minirohrabschneider.


Bördeln Sie das eine abgetrennte Ende. Vergessen Sie dabei nicht VORHER die Überwurfverschraubung aufzuschieben.



Verschrauben Sie zunächst eine Überwurfmutter in die Muffe und biegen Sie die Leitung in die korrekte Position zurück.




Nun messen Sie die andere Seite der Leitung aus (plus 5 mm Zugabe für Bördelung berücksichtigen) und schneiden auch die zweite Seite passend ab.



Schieben Sie die zweite Überwurfverschraubung auf, bördeln das offene Ende und verschrauben dies in die Muffe.

How do I mount a pipe sleeve ?


Cut the defect brake pipe with a tube cutter.

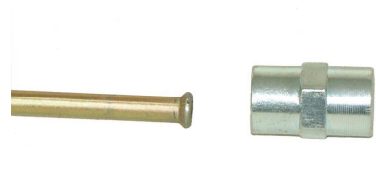

Put the cap screw on the open end and do the flanging.



Assemble the cap screw of one side to the pipe sleeve and bend the brake line in the correct position.



Measure the required length of the second brake line (add 5 mm for the flanging) and cut the second brake line.



Put the caps crew on, do the flanging and assemble the second side to the pipe sleeve.